


VBC Products Installation Guidelines

Step 4B: Seal Penetrations - Square Penetrations


All penetrations must be sealed with the Barrier-Bac Composite and BB20T Seam Tape. For square posts, please seal penetrations with Block Out Seaming Methods.

Cut corners approximately half the height of Block Out

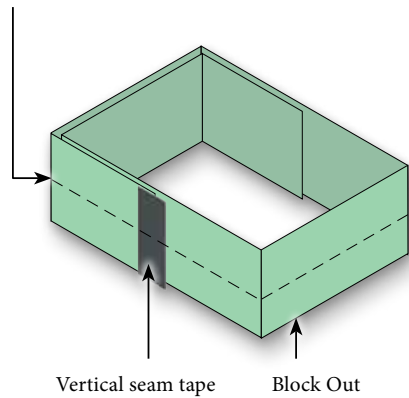

- 1 -

Cut a piece of Barrier-Bac Vapor Retarder Membrane twice the height and one and one-half the length of the perimeter of the Block Out. Wrap membrane around Block Out and temporarily tape vertical seam.

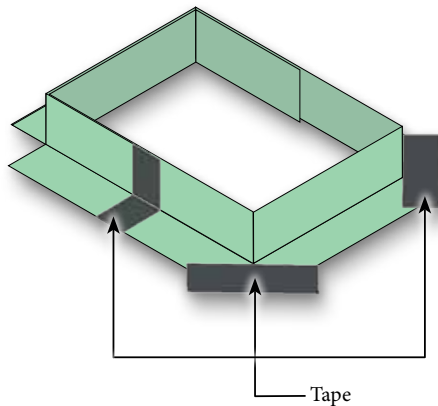

- 2 -

Make cuts in each of the four corners approximately half the height of the Block Out. Remove formed Block Out membrane form, flip over and replace on Block Out spreading flaps to horizontal position.

Tape all flaps securely with Barrier-Bac Seam Tape.