


VBC Products Installation Guidelines


Step 5: Patch Damages and Pour Concrete

All damages to the film must be sealed prior to pouring. Patch all damaged areas with Barrier-Bac Composite products and Seam Tape prior to concrete pouring. Concrete may be poured directly onto Barrier-Bac Composite Product – VBC-350(31 mil).

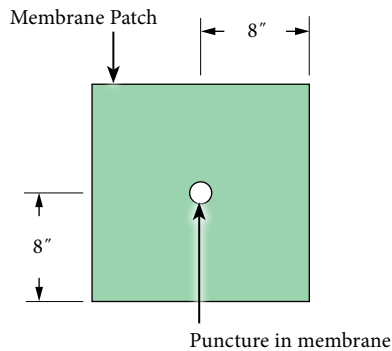

- 1 -

Cut a piece of Barrier-Bac Vapor Retarder in a square large enough so sides of patch extend eight inches from side of puncture.

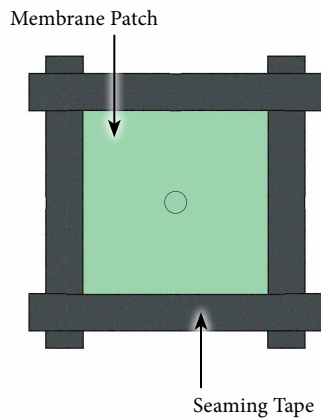

- 2 -

Cover damaged portion with membrane patch and secure all patch seams with Barrier-Bac Seam Tape.