


## VB Products Installation Guidelines


### Step 5: Patch Damages and Pour Concrete

All damages to the film must be sealed prior to pouring. Patch all damaged areas with Barrier-Bac and Seam Tape prior to concrete pouring. Concrete may be poured directly onto Barrier-Bac VB-250 (11 mil) and VB-350(16 mil). However, a sand or gravel cover is preferred. It is used at the discretion of the architect or in compliance with local building and regulatory codes.

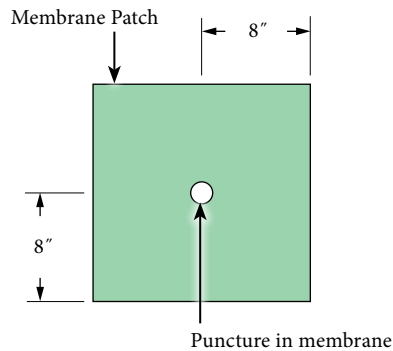

**- 1 -**

Cut a piece of Barrier-Bac Vapor Retarder in a square large enough so sides of patch extend eight inches from side of puncture.

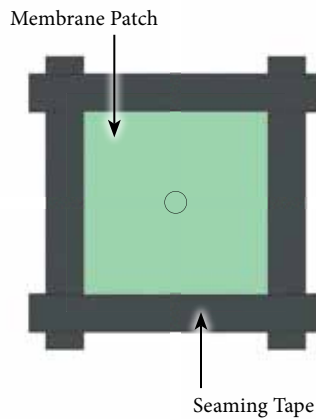

**- 2 -**

Cover damaged portion with membrane patch and secure all patch seams with Barrier-Bac Seam Tape.