


The Application of Seam Tape


Step 4: Patch Damages and Pour Concrete

All damages to the film must be sealed prior to pouring. Patch all damaged areas with Barrier-Bac and Seam Tape prior to concrete pouring.

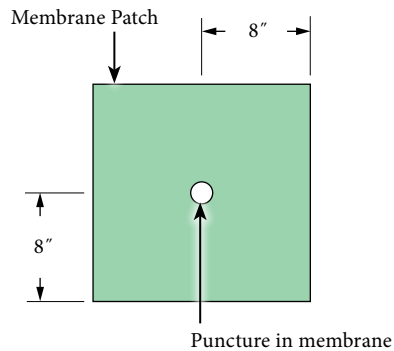

- 1 -

Cut a piece of Barrier-Bac Vapor Retarder in a square large enough so sides of patch extend eight inches from side of puncture.

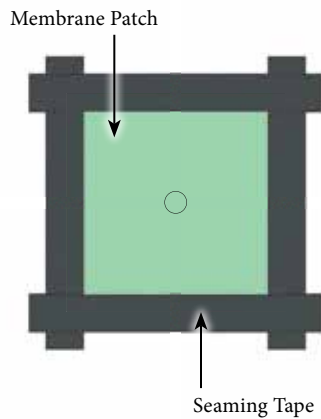

- 2 -

Cover damaged portion with membrane patch and secure all patch seams with Barrier-Bac Seam Tape.