


INSTALLATION GUIDELINES

STEP 7-1: Barrier-Bac Vapor Barrier Encapsulation at Grade Beam

Extend VB-250/VB-350 Vapor Barrier under/around Grade Beams.

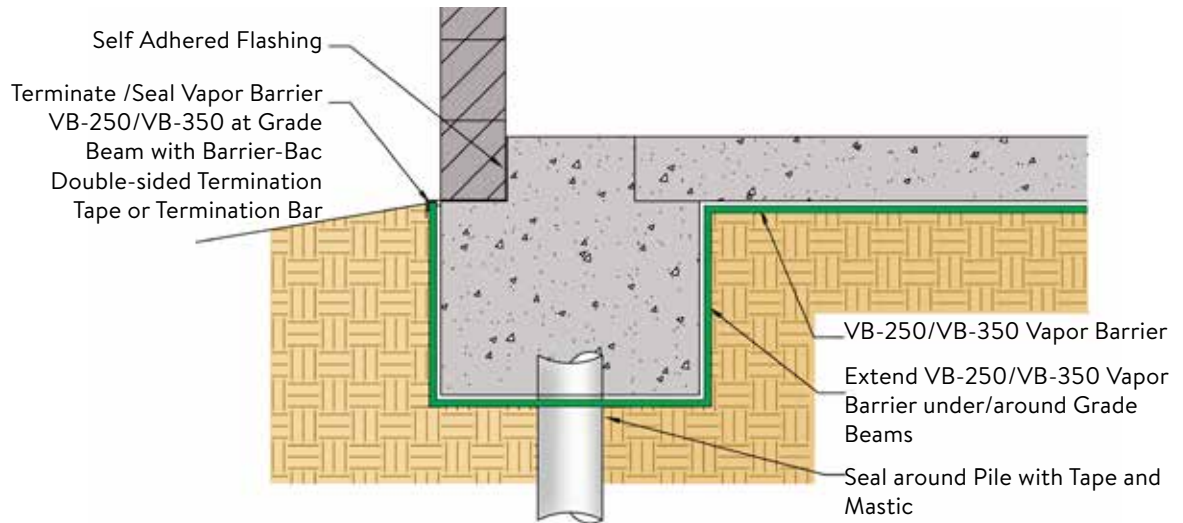

STEP 7-2: Barrier-Bac Vapor Barrier Encapsulation at Footing

Extend VB-250/VB-350 Vapor Barrier under/around Perimeter Footing.

