




INSTALLATION GUIDELINES

Composite Vapor Barrier

STEP 1A: Ground Surface Preparation—Earth Base

Select the suitable Barrier-Bac Composite product (VBC-350, 31 mil) and ensure the installation surface is relatively smooth. Barrier-Bac should be unrolled to completely cover the pour area. When install Barrier-Bac Composite Vapor Barrier, the geotextile has to be placed facing up.

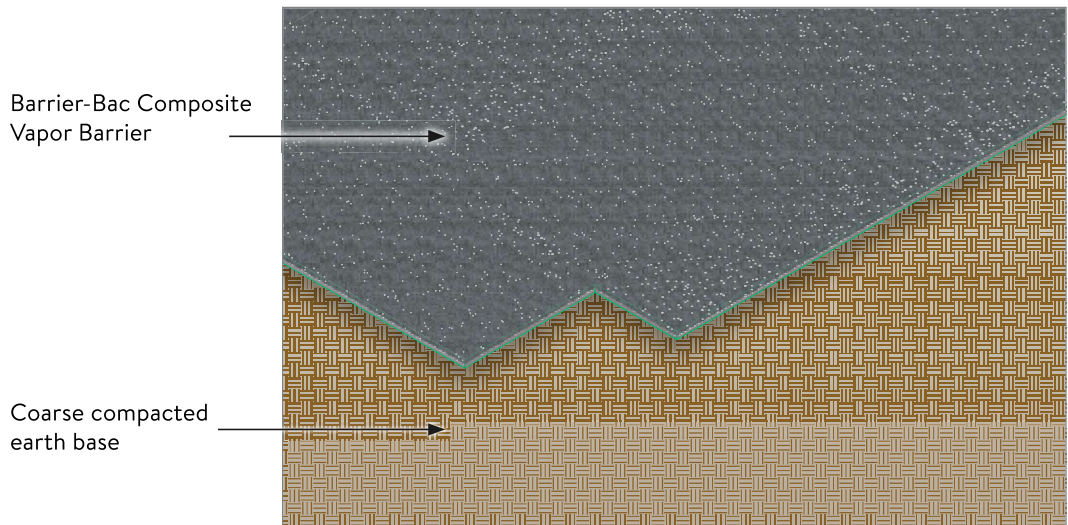

STEP 1B: Ground Surface Preparation—Aggregate Base

Although Barrier-Bac products are extremely tough, installation is easier and more effective when done over a smooth base. It is optional to have a layer of granular fill under the Barrier-Bac. When install Barrier-Bac Composite Vapor Barrier, the geotextile has to be placed facing up.

