


### STEP 2: Unroll, Overlap And Tape The Seam

Seams and/or joints can be joined using Barrier-Bac White Bond Tape. The film should be overlapped six inches side-to-side and end-to-end.

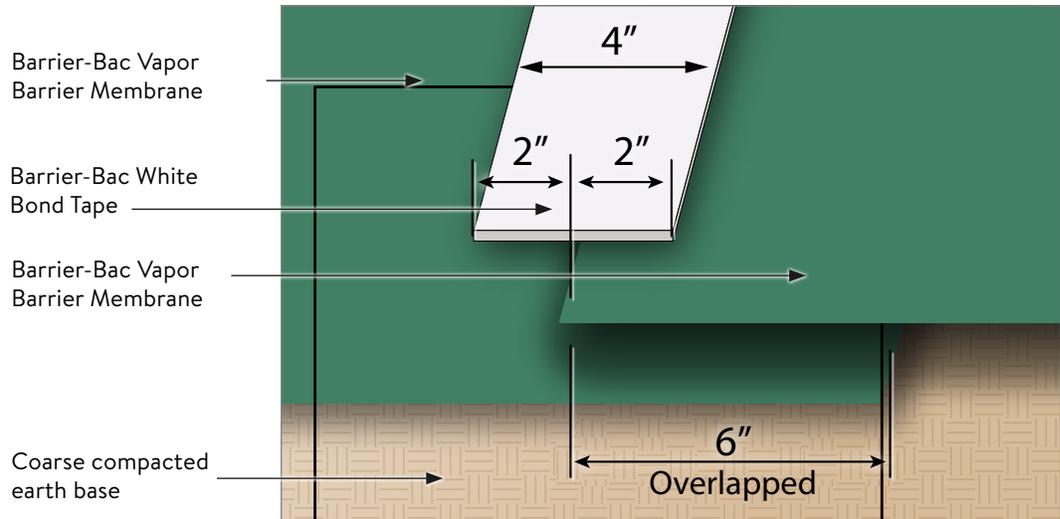

### STEP 3: Pour The Concrete

Inspect all seams, penetration and damaged areas and make sure they are well sealed or patched. (See Step 7 & 8: Seal Penetrations and Step 9: Patch Damage) After seal all penetrations and patch all damaged areas, pour the concrete on top of Barrier-Bac Vapor Barrier

