


Installation Guidelines
VBC-90 Floor
Protection Product

VBC-90 (18 mil) Floor Protection should be installed at least 72 hours after concrete is poured to protect the floor, prior to the completion of polished, stained, stamped or other decorative finishes. It can also be used after the decorative finish is completed to protect the final installation.


STEP 1: UNROLL

Unroll and position over specific area. Install with the shiny plastic side up

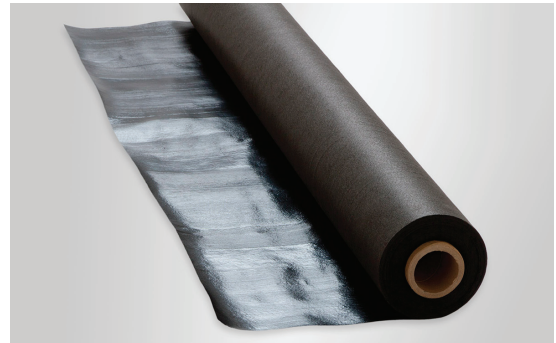

STEP 2: TAPE THE SEAM

Overlap seam at least 2” wide and secure overlaps with White Bond Tape. Do not apply tape to the floor or decorative surface directly, it may permanently damage the floor or surface.

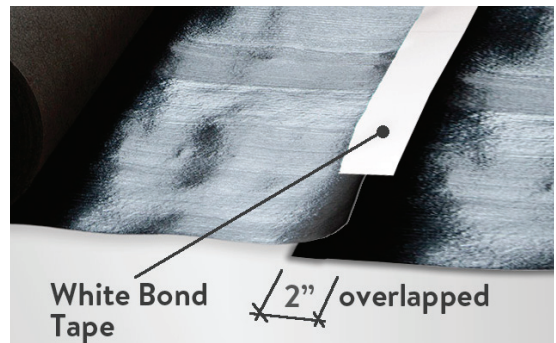

STEP 3: CUT TO FIT

Cut to fit using scissors or a utility knife.

STEP 4: REMOVE

Remove easily at the completion of the project, revealing a clean dry floor that requires minimal clean up.

Discard used products following local regulations.